




# JUMPING JACK BOOBY TRAP EWD 444

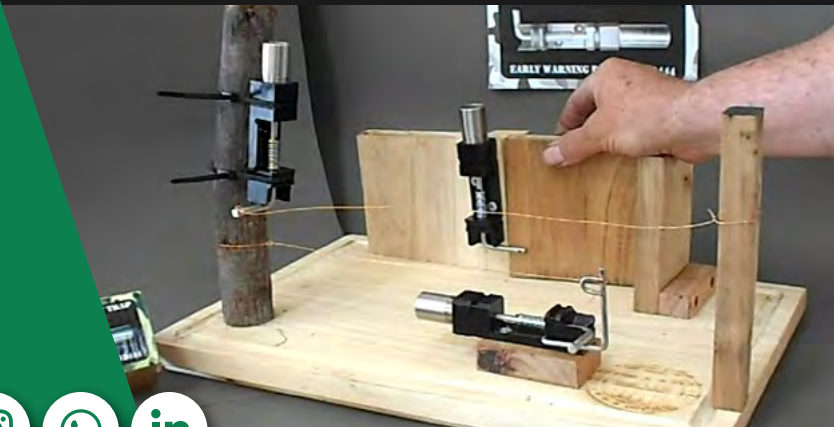





## JUMPING JACK BOOBY TRAP:

The Jumping Jack booby trap is an early warning device. A fire arm license is not required to use this device. We, with the cooperation of the SAPS, demonstrate our product to the farming community.



### HOW TO USE:

- Do not load the Jumping Jack unless it is mounted.
- Mount securely with screws and/or cable ties.
- Make sure acoustic chamber (barrel) is screwed all the way when charged.
- To make Jumping Jack safe, turn the acoustic chamber anti clockwise, 2 turns.
- Do not use the acoustic chamber as a projectile launch item.
- Always make sure the acoustic chamber is pointed away from any body part.
- The cartridges must be stored with your ammunition in a safe.
- When using in a camp site put out warning signs.

### INSTRUCTION VIDEO



**THIS IS NOT A TOY. KEEP OUT OF REACH OF CHILDREN AND PETS. CAM PRODUCTS WILL NOT BE HELD RESPONSIBLE FOR ANY INJURIES.**

**SHOP OUR FULL RANGE OF PRODUCTS AT [WWW.CAMPROD.CO.ZA](http://WWW.CAMPROD.CO.ZA)**

### FLAT PACK DELUXE LONG



### SINGLE PIZZA OVEN



### VERTICAL SPIT



**[WWW.CAMPROD.CO.ZA](http://WWW.CAMPROD.CO.ZA)**